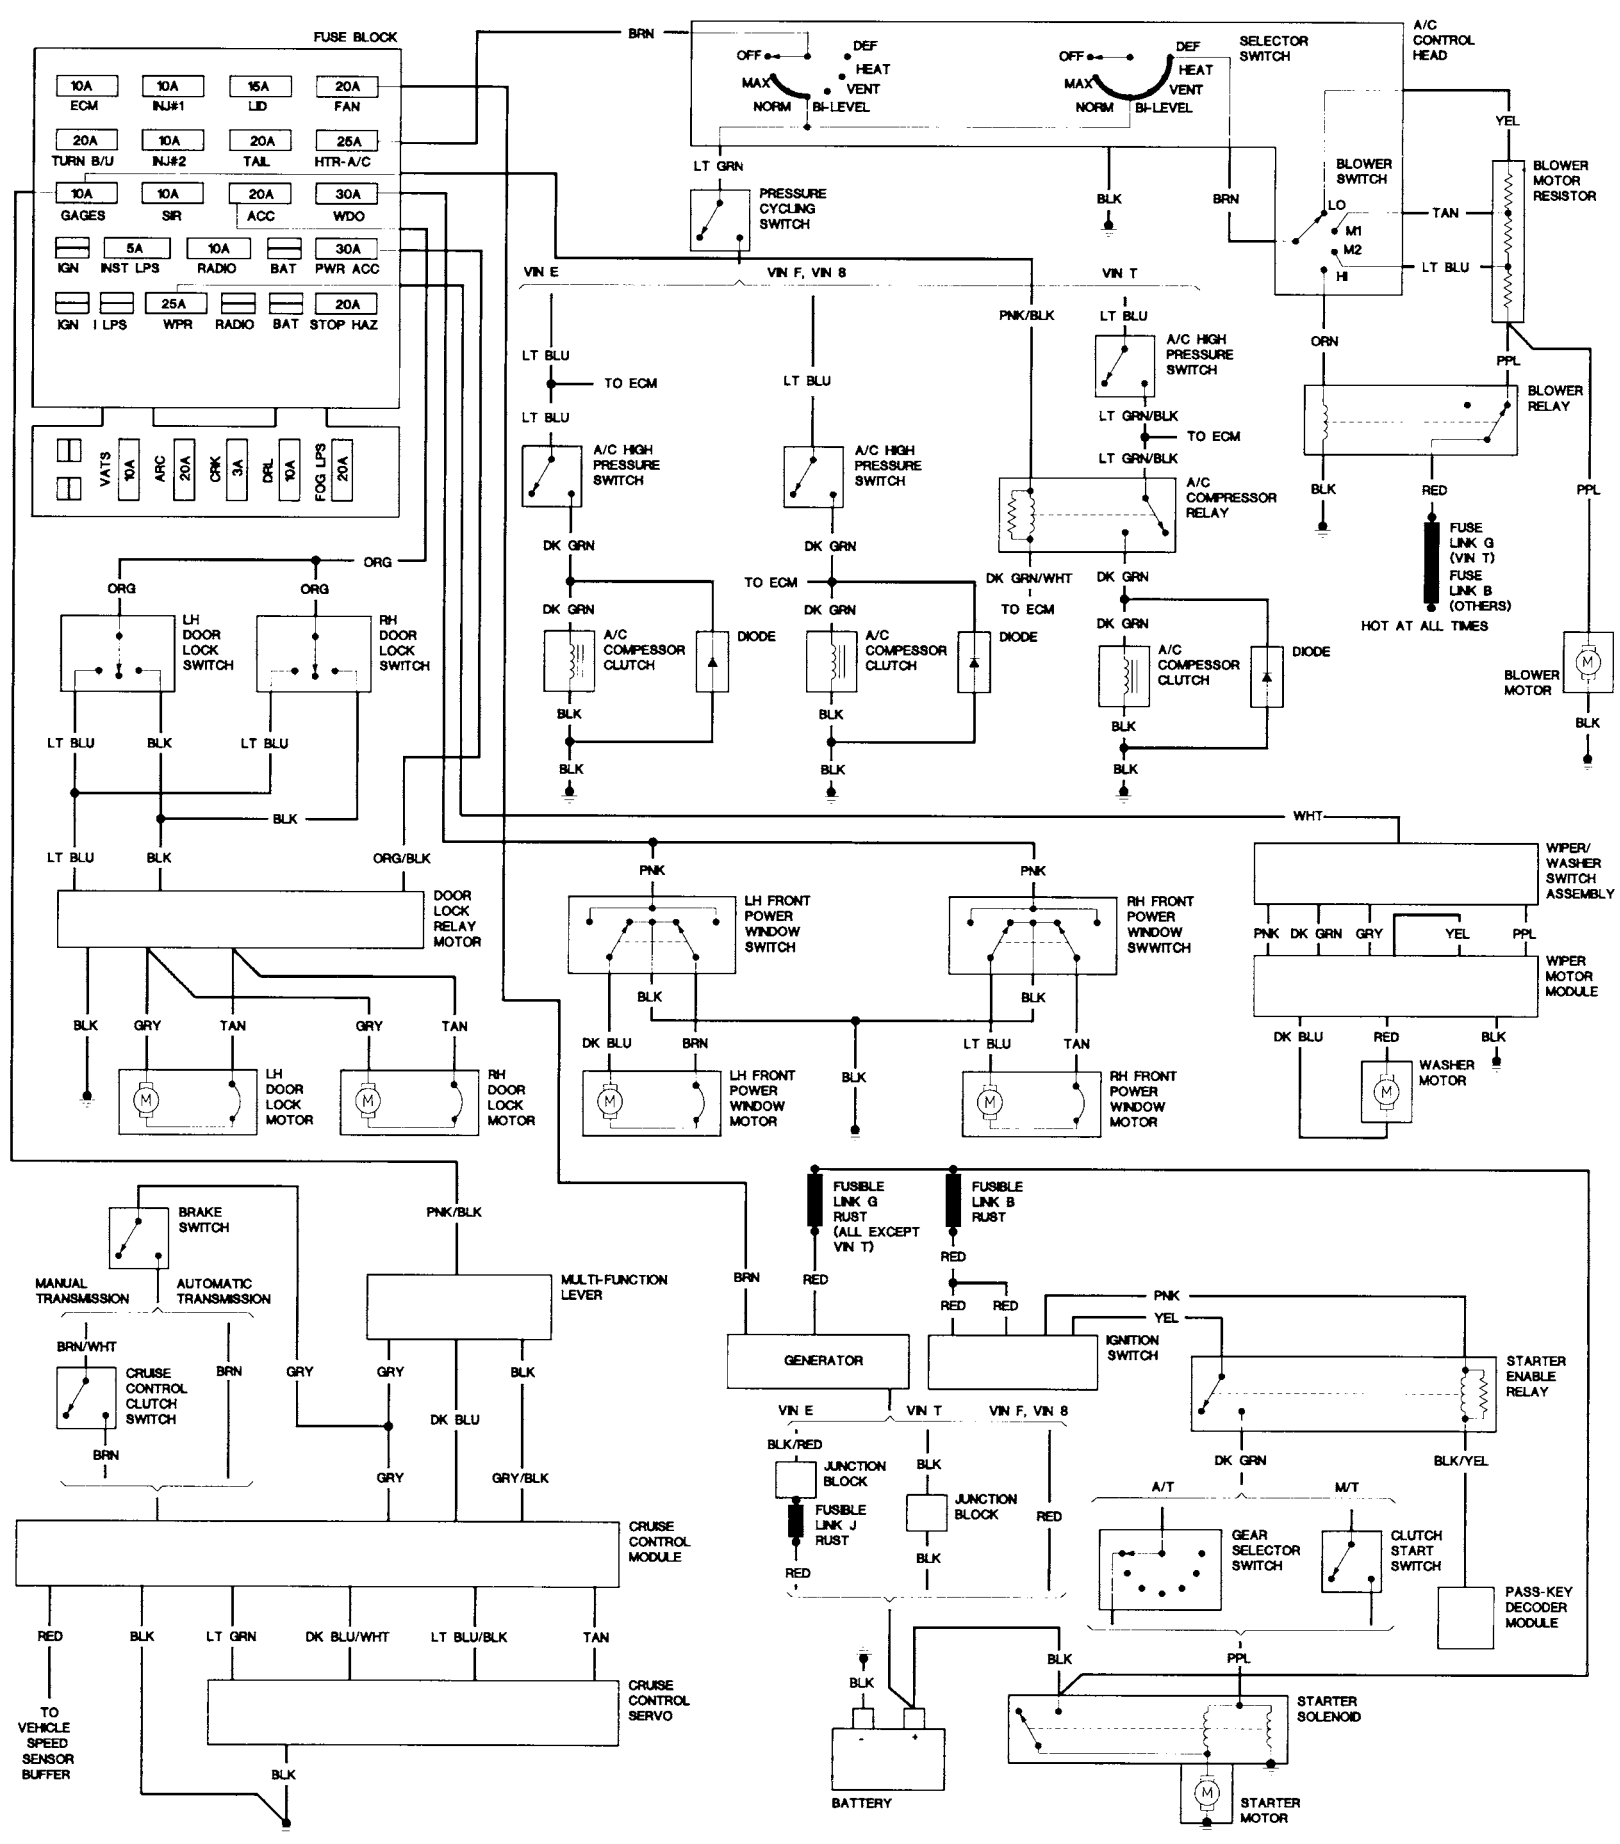
FUSE BLOCK
10A ECM
10A INJ#1
15A LID
20A FAN
20A TURN B/U
10A INJ#2
20A TAIL
25A HTR-A/C
10A GAGES
10A SIR
20A ACC
30A WDO
IGN
5A INST LPS
10A RADIO
BAT
30A PWR ACC
IGN
I LPS
25A WPR
RADIO
BAT
20A STOP HAZ
VATS 10A
ARC 20A
CRK 3A
DRL 10A
FOG LPS 20A
A/C CONTROL HEAD
SELECTOR SWITCH
OFF
DEF
HEAT
VENT
BI-LEVEL
MAX
NORM
PRESSURE CYCLING SWITCH
BLOWER SWITCH
LO
M1
M2
HI
BLOWER MOTOR RESISTOR
BLOWER RELAY
BLOWER MOTOR
FUSE LINK G (VIN T)
FUSE LINK B (OTHERS)
HOT AT ALL TIMES
VIN E
VIN F, VIN 8
VIN T
TO ECM
A/C HIGH PRESSURE SWITCH
A/C COMPRESSOR RELAY
A/C COMPRESSOR CLUTCH
DIODE
LH DOOR LOCK SWITCH
RH DOOR LOCK SWITCH
DOOR LOCK RELAY MOTOR
LH DOOR LOCK MOTOR
RH DOOR LOCK MOTOR
LH FRONT POWER WINDOW SWITCH
RH FRONT POWER WINDOW SWWITCH
LH FRONT POWER WINDOW MOTOR
RH FRONT POWER WINDOW MOTOR
WIPER/ WASHER SWITCH ASSEMBLY
WIPER MOTOR MODULE
WASHER MOTOR
BRAKE SWITCH
MANUAL TRANSMISSION
AUTOMATIC TRANSMISSION
CRUISE CONTROL CLUTCH SWITCH
MULTI-FUNCTION LEVER
CRUISE CONTROL MODULE
CRUISE CONTROL SERVO
TO VEHICLE SPEED SENSOR BUFFER
FUSIBLE LINK G RUST (ALL EXCEPT VIN T)
FUSIBLE LINK B RUST
GENERATOR
IGNITION SWITCH
STARTER ENABLE RELAY
JUNCTION BLOCK
FUSIBLE LINK J RUST
GEAR SELECTOR SWITCH
CLUTCH START SWITCH
PASS-KEY DECODER MODULE
BATTERY
STARTER SOLENOID
STARTER MOTOR